

Drawing Package Supplement

to

ASTEROIDS

Operation, Maintenance, and Service Manual

Contents of this Drawing Package


Game Wiring Diagram, Coin Door and Power Supply

Microprocessor **Video Generator**

Sheet 1, Side A Sheet 1, Side B Sheet 2, Side A Switch Inputs, Coin Counter, LED and Audio Outputs Sheet 2, Side B

A Warner Communications Company

ASTEROIDS WIRING DIAGRAM (035156-02 A) ASTERCIDS MAIN PCB CHEMATIC 034988-XX - SENSE 22 R/BU w colling not w colling not w + SENSE ON-OFF INTERLOCK GND A +5V (| 2 | R/W | BN/V AUDIO 2 E BN/W AUDIO 1 5 Y GND V BK DIAG STEP K Z GND 11 X OUT 17 Y T.P. Z OUT M K START 2 +5V Y R START 2 (LED) 6 W/R START I (LED) 8 WIBK START I (N.O.) N W/GY START 2 (N.O.) P WIOR THRUST 14 W/V ROTATE RIGHT S WIGH ROTATE LEFT 15 WIEU ROTATE RT 852 BU HYPERSPACE 10 W/BN S53 GN COIN L (N.O.) 13 Y COIN C (N.O.) 12 BN COIN R (N.O.) R OR SELF TEST L W SLAM 9 GY GND Z BK R. COIN (CNTR) F BUIBK C. COIN (CNTR) 4 GNIBK GN/BK 15 CR/W 16 V/BK 17 NOTES OR/W 18 CONTROL USED WITH COIN DOOR ASSY. A009083-XX 6N 23 24

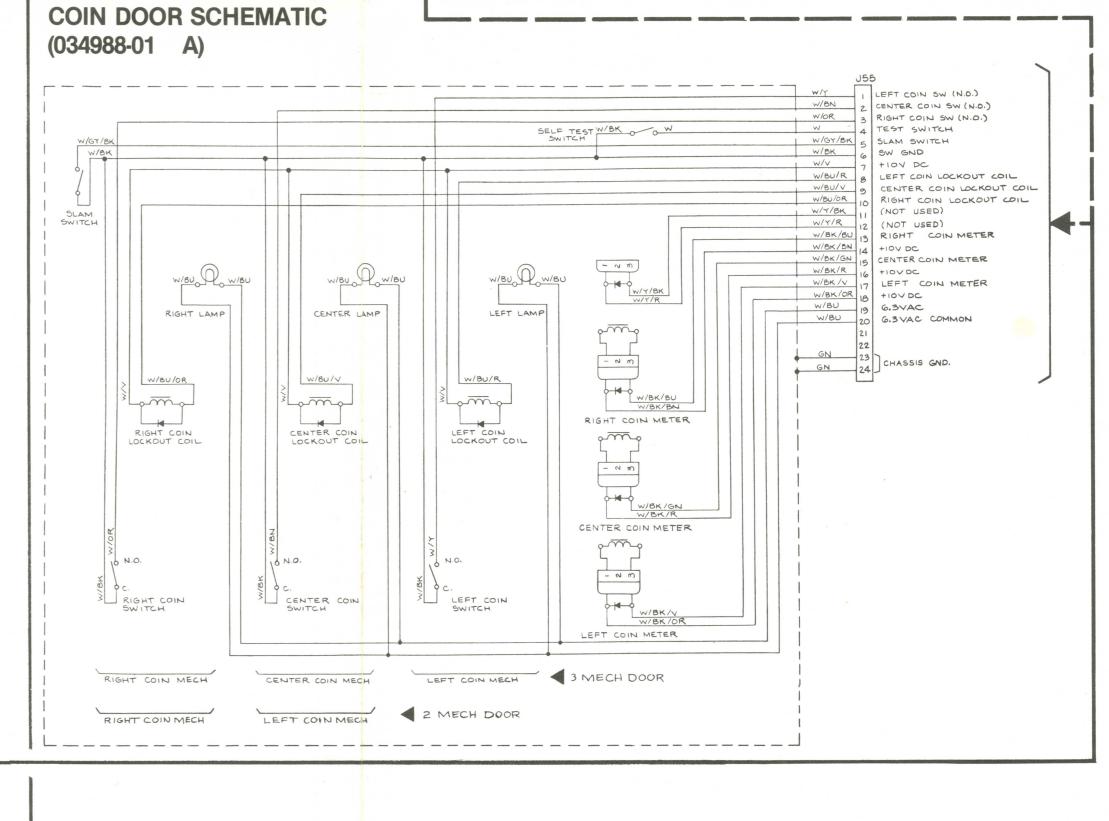

denotes a test point

© 1979 Atari, Inc.